

Hive Active Light

Cool to warm white
smart light bulb

User guide



Welcome to Hive

This guide tells you everything
you need to know to use your
Hive Active Light.



If you're new to Hive products,
please see the user guide
provided with your Hive Hub
to set up your Hive account.

Your Hive Active Light can be turned on and off and dimmed remotely from your smartphone or tablet. You can also choose tones from cool to warm white and set schedules for when it turns on and off.

Getting started:

① Add your Hive Active Light

You can do this using your Hive app or the online dashboard.

Using the Hive app:

- Open the Hive app on your smartphone or tablet. You may be asked to log-in.
- Tap the **Menu** button and then **Install devices**, then follow the on-screen instructions.

Using the online dashboard:

- Log in to your Hive account at **hivehome.com**
- Under **Settings** select **Install devices**, then follow the on-screen instructions.

2 Fit the bulb into the light fitting and switch the light on

Ensure the wall switch for the light is switched off before fitting the bulb. Your Hive Active Light is fitted in the same way traditional household bulbs are. Once fitted, switch the light on at the wall and the bulb will then flash on and off to show that it is searching for your hub.

Once your Hive Active Light appears on the screen it will flash once more to confirm it's connected. You can now name it and press **Save** to complete setup.

3 That's it!

You've finished setting up your Hive Active Light and you can now control it remotely.

Remember: To turn your Hive Active Light on or off remotely it must be switched on at the wall. Your Hive Active Light should not be dimmed using a wall mounted dimmer switch as it may cause buzzing or flickering.
Use in dry location only.

Usage

Your Hive Active Light is designed for indoor use only. Not suitable for emergency lighting.

Maintenance

Disconnect your Hive Active Light before cleaning and keep it away from water and other liquids at all times. The Hive Active Light does not contain any serviceable parts so do not attempt to open it.

Can we help?

You can view our handy how-to-use videos along with hints and tips at hivehome.com/support

If for any reason you need to return your Hive Active Light, simply return your box and its contents to the retailer. Any return is subject to the retailer's refund policy so please don't forget to check the retailer's refund policy too.

Centrica Connected Home Limited
declares that the radio equipment types
HV-GSCXZB279 and HV-GSCXZB229 comply
with Directive 2014/53/EU. Full declaration
text available at: hivehome.com/compliance

Max. radiated power: 10dBm
Frequency: 2400-2483.5MHz



To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with a crossed out wheeled bin should not be placed into your household rubbish bin. Instead, when they are unable to be re-used, they should be recycled. Your local authority will be able to advise you on the location of the nearest recycling centre that is authorised to accept this type of waste. Please recycle responsibly.

