



[hivehome.com](http://hivehome.com)

© 2017 Centrica Connected Home Limited.  
Registered in England (No. 5782908).  
Registered office: Millstream, Maidenhead Road,  
Windsor, Berkshire SL4 5GD. All rights reserved.

UG70007300517

A **British Gas** innovation

Fitting instructions overleaf




## How to fit the Hive thermostat to your stand

- 1 **Remove the back plate** of the thermostat by pressing the lever at the bottom and pulling away from the front of the device.
- 2 **Hook the thermostat** onto the stand back plate and click it in place.



Press tab to open

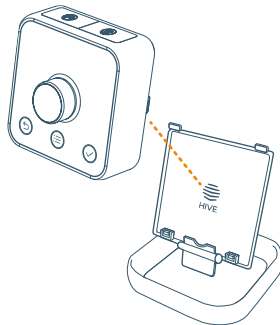

## Choosing a location for your thermostat

Aim for around 1–1.5m from the floor and away from heat sources such as radiators and direct sunlight. To make accurate temperature readings, your thermostat needs a free flow of air so please ensure you place in an area not covered by curtains or similar objects.

**Remember:** If the thermostat is positioned in the same room as a radiator controlled by a thermostatic radiator valve (TRV) this may prevent the thermostat from being able to reach its target temperature and may result in the central heating being permanently on.